


MICRO HEAT PUMP PANEL GUIDE

RECOMMENDED SETTINGS

AES	Off
Temperature	50°C
Timer	Off, leave heater on
Mode	Efficiency

 **✗ Avoid bacteria.**
Do not set below 50°C



TEMP. SETTINGS

Use settings below to save energy.

- Showers: 50°C
- Bathtubs: 65°C

TEMP. INDICATOR

- **Red:** hot
- **Yellow:** warm
- **Green:** cold

Save time:

Have 3 red bars or more?
You can shower immediately.




ACTUAL TEMP.

Measures internal tank temperature. It may differ from the setting temperature.



MODE

Efficiency: 210 watts
Hybrid: 3000 watts

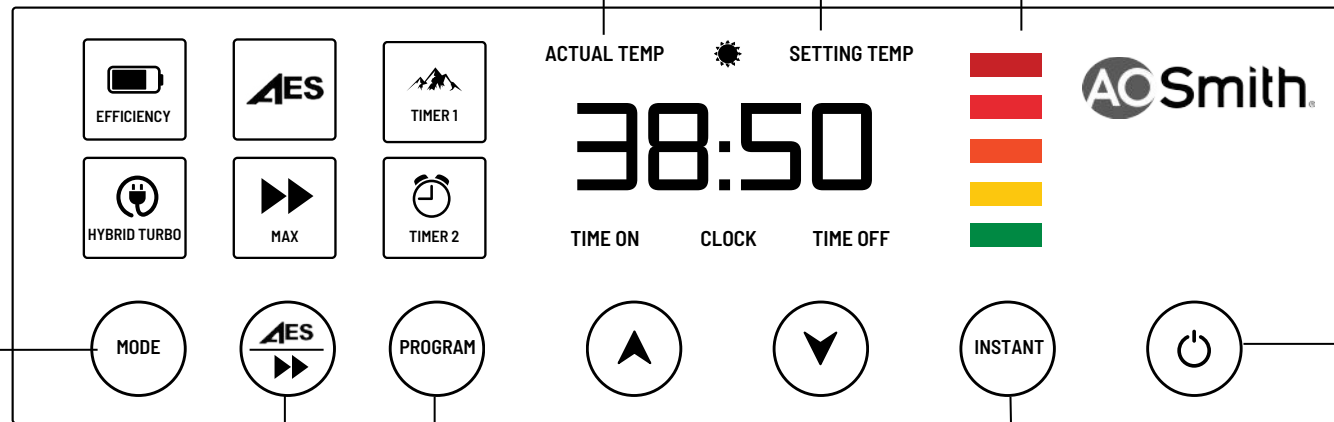

POWER

Do not switch off your heat pump. Power off only if vacationing for over 3 days.

Memory

Without power, panel will retain settings for 48 hours.

Main switch control

Always power off at main switch.



AES: AUTO TIMER

AES is for cold climates. Disable for Singapore.



TIMER

- To maximise efficiency, disable the timer.
- Timer video: www.aosbath.com/clock



SPEED HEATING

Get hot water in 5 minutes. Uses 100% electricity instead of heat pump.