

Gen 6 Digital Panel Guide

USE THESE SETTINGS

Mode Multiple
Set Temp. Showers: 50°C
Bathtubs: 65°C



Heating Light
When light is on, tank is actively heating.



Set Temperature
For Singapore:
Showers: 50°C
Bathtubs: 65°C



Avoid bacteria.
Do not set below 50°C.



Actual temperature
average tank temp.



Heater mode
For Singapore, use **Multiple**
With Single or Standard mode, you will get less hot water.



Clock and Timer
To save more energy, **don't use a timer.**

It is best to turn off the heater when not in use.

Timer demo:
www.aosbath.com/clock



Temperature Bars

Red: hot
Yellow: warm
Green: cold

Save time: 2 red bars means you can shower now.



Instant Speed Heat
In multiple mode, this is an auto function.



When heater is speed heating, this light will come on.



Up-Down Keys
Use these to set your tank temperature



Power
At main heater switch, power off after use. Without power, panel keeps settings for 48 hours.