 


# HPI Heat Pump Panel Guide

## Best Settings for SG

<b>Mode</b>	Efficiency
<b>Set Temp.</b>	50 to 65°C
<b>Timer</b>	Off
<b>AES</b>	Off



**Heating Light**  
When light is on, tank is heating.



**Set Temperature**  
For Singapore:  
Showers: 50°C,  
Bathtubs: 65°C



✗ **Avoid bacteria.**  
Do not set below 50°C.



**Actual temperature**  
average tank temp.



**Heater mode**  
For Singapore, use  
**Efficiency**



On **hybrid turbo**,  
system will run like a  
normal electric heater.



**Pump & AES**  
Not in use in  
Singapore



**Up-Down Keys**  
Use these to set your tank  
temperature



**Temperature Bars**  
**Red:** hot  
**Yellow:** warm  
**Green:** cold



**Program & Instant**  
**Program** for timer, not  
used.  
**Instant** for hybrid turbo  
mode.



**Power**  
Leave isolator on.  
Heater goes off if not in use.  
When off, panel keeps  
settings for 48 hours.