

HPI Heat Pump Panel Guide

USE THESE SETTINGS

- Mode** Efficiency
- Set Temp.** 50 to 65°C
- Timer** Off
- AES** Off




Heating Light

When light is on, tank is actively heating.



Set Temperature

For Singapore: Showers: 50°C, Bathtubs: 65°C

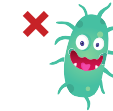

Avoid bacteria.

Do not set below 50°C.



Temperature Bars

Red: hot

Yellow: warm

Green: cold



Program & Instant

Program for timer, not used.

Instant for hybrid turbo mode.



Power

Leave isolator on.

Heater goes off if not in use.

With no power, panel

keeps settings for 48 hours.



Actual temperature

average tank temp.



Heater mode

For Singapore, use **Efficiency**



On **hybrid turbo**, system will run like a normal electric heater.



Pump & AES

Not in use in Singapore



Up-Down Keys

Use these to set your tank temperature

